



# **WR100 300Mbps Wireless-N Repeater**

## ***User Manual***

*Release 1.0*  
**November 29, 2012**



# Table of Contents

<b>About the Device .....</b>	<b>3</b>
<b>Minimum System Requirements.....</b>	<b>3</b>
<b>Package Contents .....</b>	<b>3</b>
<b>Device Overview .....</b>	<b>4</b>
Front Panel .....	4
Top Panel.....	5
Bottom Panel.....	5
<b>Accessing the User Interface.....</b>	<b>6</b>
<b>Quick Connect.....</b>	<b>7</b>
<b>Setup .....</b>	<b>8</b>
<b>Wireless .....</b>	<b>10</b>
Wireless Basic Settings.....	10
Wireless Security Settings .....	11
MAC Filter Settings .....	12
<b>System .....</b>	<b>14</b>
Device Information .....	14
LAN Configuration.....	15
Configuration Settings.....	16
Firmware Upgrade .....	17
System Password .....	18
<b>Installing the Device .....</b>	<b>19</b>
<b>Wireless Repeater .....</b>	<b>20</b>
<b>Wireless Access Point .....</b>	<b>22</b>
<b>Wireless Bridge .....</b>	<b>24</b>
<b>WPS .....</b>	<b>25</b>
Configure WR100 to Wireless Router via WPS.....	25
Configure WR100 to Wireless client via WPS.....	25
<b>Safety Precautions.....</b>	<b>25</b>

## About the Device

The SmartRG WR100 is a Wall-plugged 300Mbps Wireless-N Repeater, which supports wireless 802.11b/g/n, and one 10/100 Base-T Ethernet port.

### Repeat and Extend the WiFi Network

The WR100 supports robust 802.11n technology with up to 300Mbps data transfer rate. The extender can take an existing 802.11n wireless signal, repeat and extend it to a longer range where it is too far away for the router or access point to reach. It eliminates the cable wires while providing the same reliable network connection. It can repeat and extend the wireless signal from virtually any 802.11n wireless router or access point available on the market. It is backwards compatible with 802.11b/g routers and access points.

### Make an existing Wired Network WiFi Ready

The extender is equipped with 1 x 10/100M Auto MDI/MDIX LAN port that can be used to connect to an existing wired network to serve as a WiFi Access Point. The Ethernet port can also be used to configure the WR100 via its web-based GUI, or upgrade the firmware.

### MIMO Technology

The device is designed with MIMO technology, which successfully reduces “dead spots”, and extends network coverage within a home or in the building.

### Advanced Security

WR100 features WiFi Protected Access (WPA and WPA2) as well as 64/128-bit WEP encryption, ensuring network security and preventing unauthorized access to you network.

### Portable without the Need of External Power Supply

The device is easy to setup. It is portable with no need of any external power adaptor. It comes with an embedded power supply and power plug, so that users can just plug the device into a power socket.

## Minimum System Requirements

Your computer must meet the following minimum requirements.

- Any operating system can be used
- Web Browser
- 233MHz processor
- Ethernet network adapter
- Or Wireless network adapter

## Package Contents

Package contents are listed below. For any missing items, please contact your dealer immediately. Product contents may vary for different models.

- WR100
- Ethernet cable
- Easy Start Guide
- Resource CD

## Device Overview

### Front Panel



LABEL	STATE	DESCRIPTION
3 BARS	Connected	95% and above RSSI (Excellent)
2 BARS	Connected	55-94% RSSI (Recommended)
1 BAR	Connected	10-54% RSSI (Weak)

## Top Panel



LABEL	DESCRIPTION
WPS BUTTON	Press to connect WR100 to any WPS capable devices

## Bottom Panel



LABEL	DESCRIPTION
RESET	Press the Reset button for 5 seconds to restore the device to default factory settings
ETHERNET PORT	Connect to computers/Ethernet devices


## Accessing the User Interface

To access the User Interface open a Web browser (Ex: Internet Explorer, Firefox or Chrome), type <http://10.0.10.254> in the address bar and press enter.



## WR100 Wi-Fi Repeater

v1.0

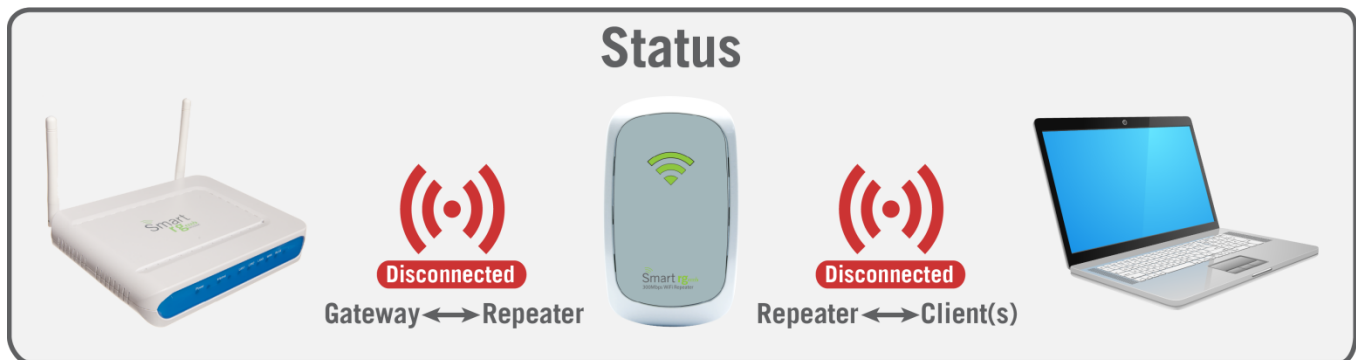

Home



Quick  
Connect



Setup



Wireless



System




Status



WPS

## Quick Connect

Press *Quick Connect* icon to scan for available wireless within the area.

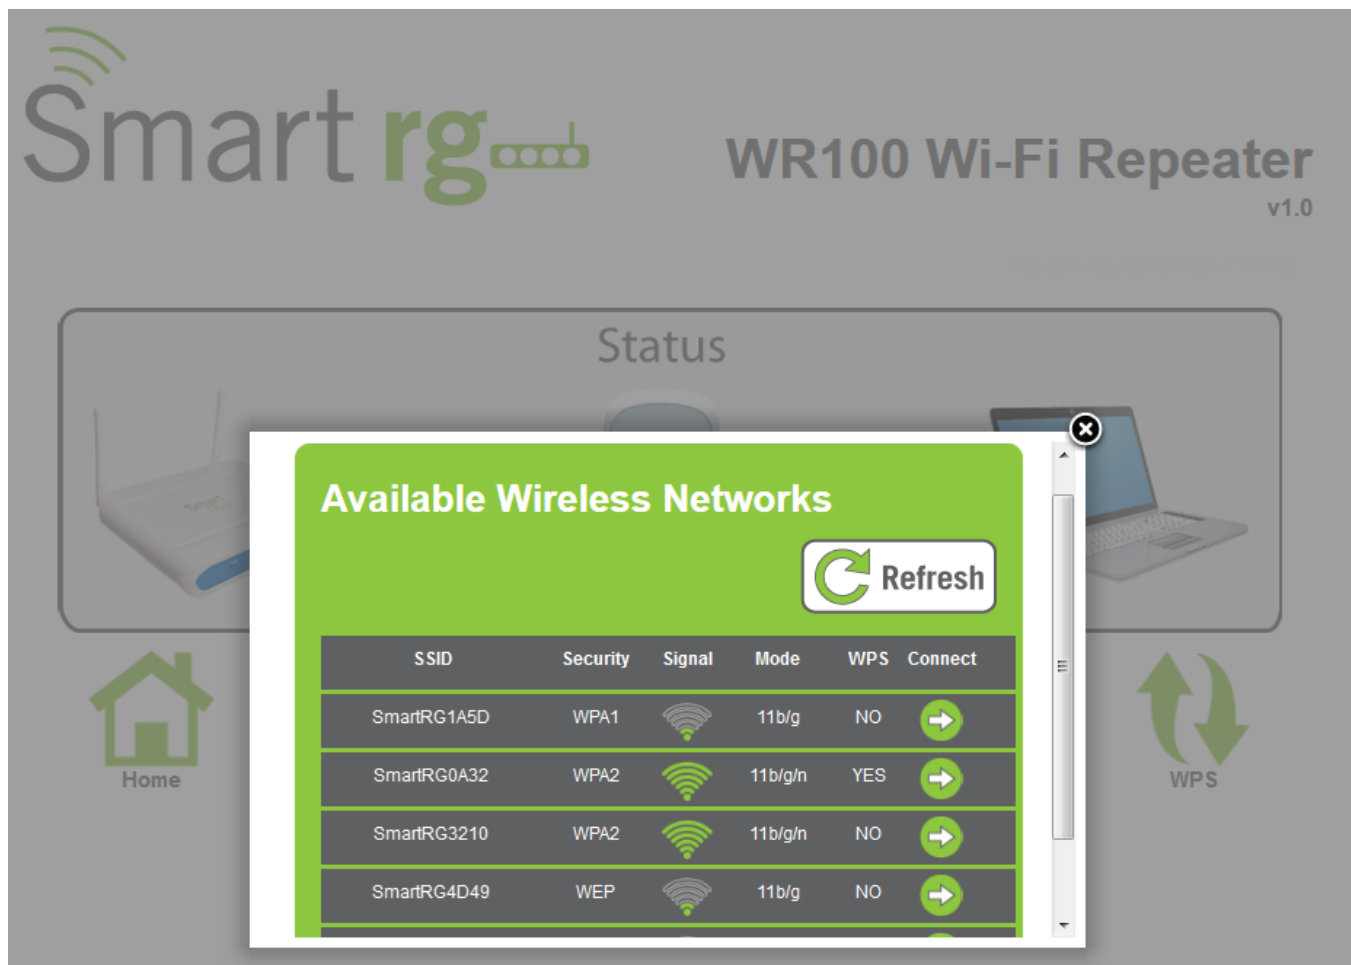

## Setup



### Setup for WR100

Mode of Operation:

☒ Repeater☐ Access Point☐ Bridge

SSID:

MAC Address:

Broadcast SSID:

☒ ENABLED☐ DISABLED

Security Mode:

OPEN



Channel:

2412MHz (Channel 1)



Enhanced Compatibility:

☒ On☐ Off

Apply

## Mode of Operation

### Repeater

The WR100 can act as a wireless repeater to extend the wireless coverage of your wireless router.

### Access Point

The WR100 can act as an Access Point to provide wireless network

### Bridge

The WR100 can act as a Bridge to act as wireless client to your network device

### SSID

Here you can set the name of your wireless network. Select the option Disable on Broadcast SSID allow you to hide the wireless network name.

### Security Mode



Select from the different encryption types list in order to provide security to your wireless network from unauthorized users. Select from the following:

#### **WEP**

##### **Hexadecimal:**

64bit – uses 10 characters length of password from A-F and numbers from 0-9

128bit- uses 26 characters length of password from A-F and numbers from 0-9

##### **ASCII:**

64bit – uses 5 characters alpha numeric password (A-Z and 0-9)

128bit – uses 13 characters length of password from (A-Z and 0-9)

#### **WPA**

Uses strong encryption, some legacy devices may not be able to associate with this type of encryption

#### **WPA2**


Use this encryption for best security, some legacy devices may not associate with this type of encryption

#### **WPA/WPA2 PSK**

Use a balance of strong security and best compatibility for new and legacy devices.

## Wireless

### Wireless Basic Settings

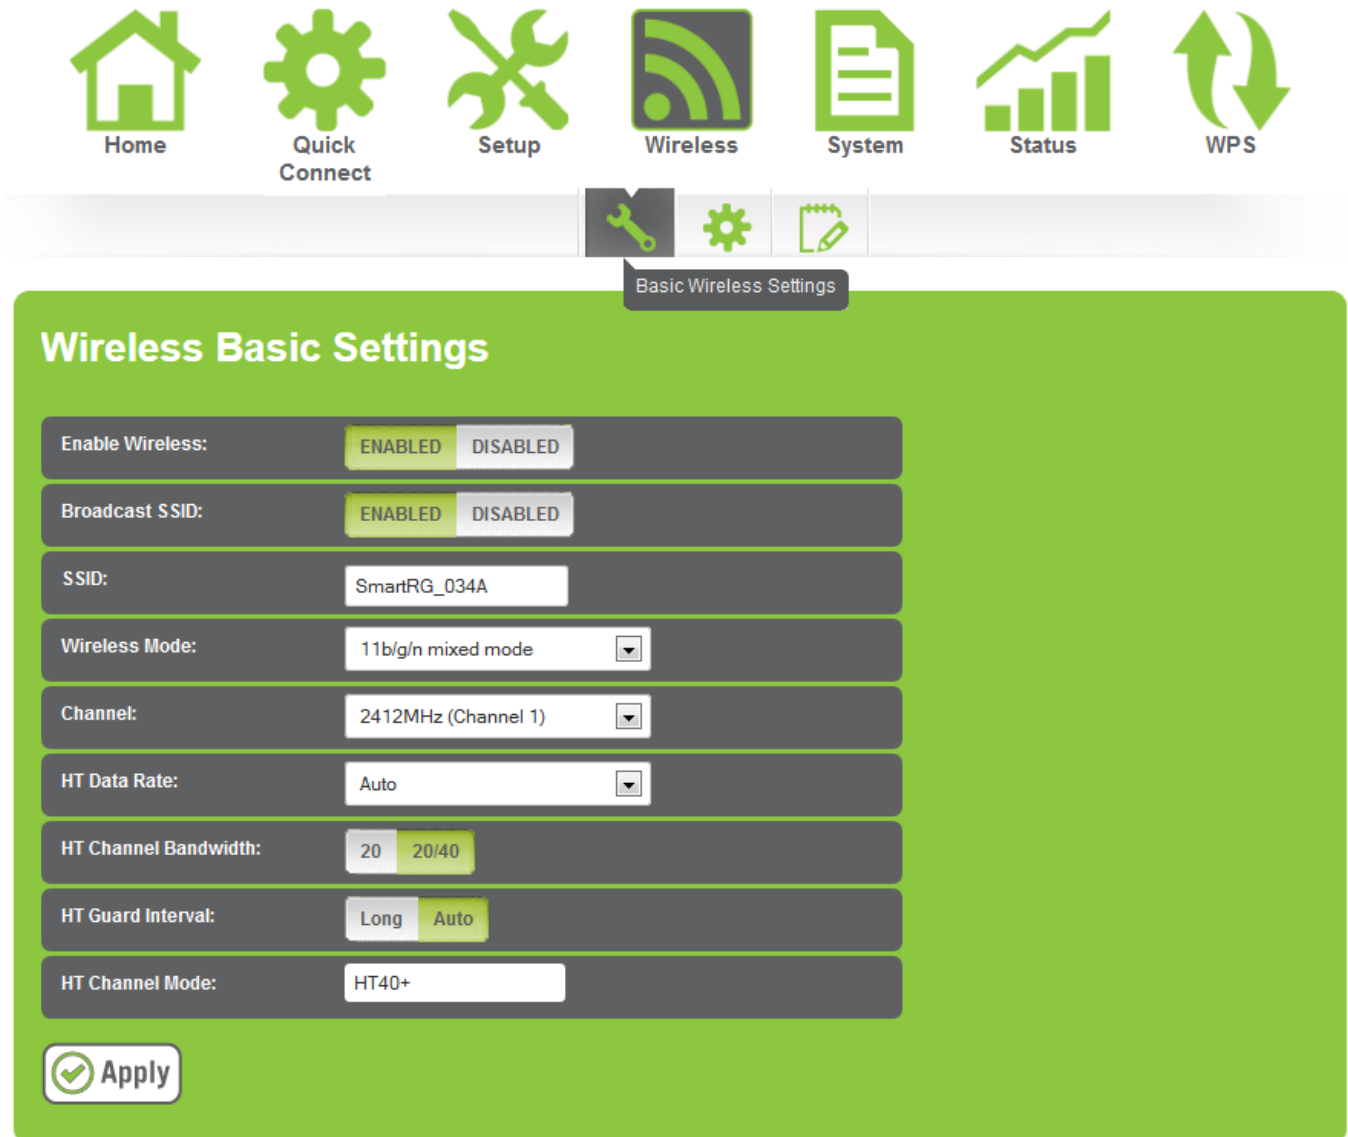

The screenshot shows the SmartRG WR100 web interface. At the top, there is a navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. Below this is a secondary bar with icons for a wrench, a gear, and a notepad. The main content area is titled 'Wireless Basic Settings' and contains several configuration options:

- Enable Wireless:** A toggle switch with 'ENABLED' selected.
- Broadcast SSID:** A toggle switch with 'ENABLED' selected.
- SSID:** A text input field containing 'SmartRG\_034A'.
- Wireless Mode:** A dropdown menu showing '11b/g/n mixed mode'.
- Channel:** A dropdown menu showing '2412MHz (Channel 1)'.
- HT Data Rate:** A dropdown menu showing 'Auto'.
- HT Channel Bandwidth:** A toggle switch with '20/40' selected.
- HT Guard Interval:** A toggle switch with 'Auto' selected.
- HT Channel Mode:** A text input field containing 'HT40+'.

At the bottom left of the settings area is an 'Apply' button with a checkmark icon.

#### Enable Wireless

Enable or Disable wireless capability

#### Broadcast SSID

Set option to disable to hide your wireless network (Enable by default)

#### SSID

Here you can enter the name of your wifi network

## Wireless Mode

This option allows you to select the type of wireless standard you want to allow to connect to your wireless network.

## Channel

Change your wireless channel when you are getting poor reception. Choose the least channel used in your area for better performance (Only applicable for AP mode)

## Channel Bandwidth

Here you can set your Channel Bandwidth to 20MHz and 20/40MHz(Auto)

## HT Data Rate and HT Guard Interval

These options are recommended to be set to Auto for maximum efficiency.

## Wireless Security Settings



The interface shows a navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. The 'Wireless' icon is selected, and a 'Security Settings' tab is active. The main content area is titled 'Wireless Security Settings' and contains the following fields:

- Security Mode:** A dropdown menu set to 'WPA2 PSK'.
- WPA Encryption:** Three buttons: 'TKIP', 'AES', and 'TKIP+AES' (which is highlighted).
- WPA Passphrase:** A text input field with masked characters (dots) and a 'Mask' checkbox that is checked.
- WPS:** Two buttons: 'ENABLED' (highlighted) and 'DISABLED'.
- Apply:** A button with a checkmark icon.
- Enrollee PIN:** A text input field containing '71857602'.
- Registrar PIN:** An empty text input field.
- Apply:** A second button with a checkmark icon.

## Security Mode

Select the type of encryption you want for your wireless network

## WPS

Set this option to enable or disable WPS (Wifi Protected Setup) feature on this device

## Enrollee PIN

Enter this PIN to wireless client that will be connecting to WR100 repeater to automatically configure the wireless device.

## Registrar PIN

Here you can enter the WPS-PIN of wireless clients and click apply for the WR100 to allow access and configure your wireless client device automatically

Note: WPS will work only for WPA-PSK, WPA2-PSK and WPA/WPA2 encryption. The wireless client must support WPS in order to use this option.

## MAC Filter Settings

This feature will provide additional protection to your wireless network. It allows or denies wireless clients from accessing through the WR100 with the use of the MAC address which is unique for every network devices.



The screenshot shows the SmartRG WR100 web interface. At the top, there is a navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. Below this is a secondary navigation bar with icons for a wrench, a gear, and a document with a pencil, labeled 'MAC Filter'. The main content area is titled 'MAC Filter Settings'. It contains a 'Policy' section with buttons for 'Disabled', 'Allow', 'Deny', and a checked 'Apply' button. Below this is a 'MAC Address' section with a text input field containing 'AA:BB:CC:DD:EE:FF' and a '+' button. At the bottom, there is a table with the following data:

S.No.	MAC Address	Rule	Remove
1	00:23:6a:32:4b:91	Reject	⊖

## Policy

### Disable

Use this option to disable or disregard the list of MAC address from blocking or allowing access to the wireless network.


### Allow

Allow the list of MAC address to access the wireless network


### Deny

Deny the list of MAC address from accessing the wireless network

## MAC Address

Type the MAC address of the wireless client here and press the plus icon  to add on the list.

## Removing a MAC address from the list

Press the minus icon  to remove the MAC address from the list

## Where can I find the MAC address of my wireless client?

On the Command Prompt type *ipconfig/all* to show all the network adapter(s) that are available.

```

Wireless LAN adapter Wireless Network Connection:

Connection-specific DNS Suffix . : 
Description . . . . . : Intel(R) Centrino(R) Wireless-N 1030
Physical Address. . . . . : AC-72-89-3B-F5-4C
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
IPv4 Address. . . . . : 192.168.1.3(Preferred)
Subnet Mask . . . . . : 255.255.255.0
Lease Obtained. . . . . : Monday, 9 July, 2012 4:46:07 PM
Lease Expires . . . . . : Monday, 9 July, 2012 10:46:06 PM
Default Gateway . . . . . : 192.168.1.254
DHCP Server . . . . . : 192.168.1.254
DNS Servers . . . . . : 192.168.1.254
NetBIOS over Tcpip. . . . . : Enabled
  
```

## System

### Device Information



The screenshot shows the SmartRG WR100 web interface. At the top, there is a navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. Below this is a secondary bar with icons for a magnifying glass, a wrench, a gear, a folder, and a lock. The 'Device Info' tab is selected, and the 'Device Information' page is displayed. The page has a green header and a table of device information.

Firmware Version:	262.174.1-003
Build Date:	Jul 16 2012
Serial Number:	5626122100019
ETH MAC Address:	00:26:75:6D:A5:61
Bridge MAC Address:	00:26:75:6D:A5:60
Wireless MAC Address:	00:26:75:6D:A5:60
Wireless Status:	Enabled

#### Firmware Version

Shows the current firmware version of the device

#### Build Date

Shows the date when the firmware was created

#### Serial Number

Shows the device's serial number


#### ETH/Bridge and Wireless MAC address

Shows the MAC address of each interface

#### Wireless Status

Shows the wireless device's wireless status

## LAN Configuration

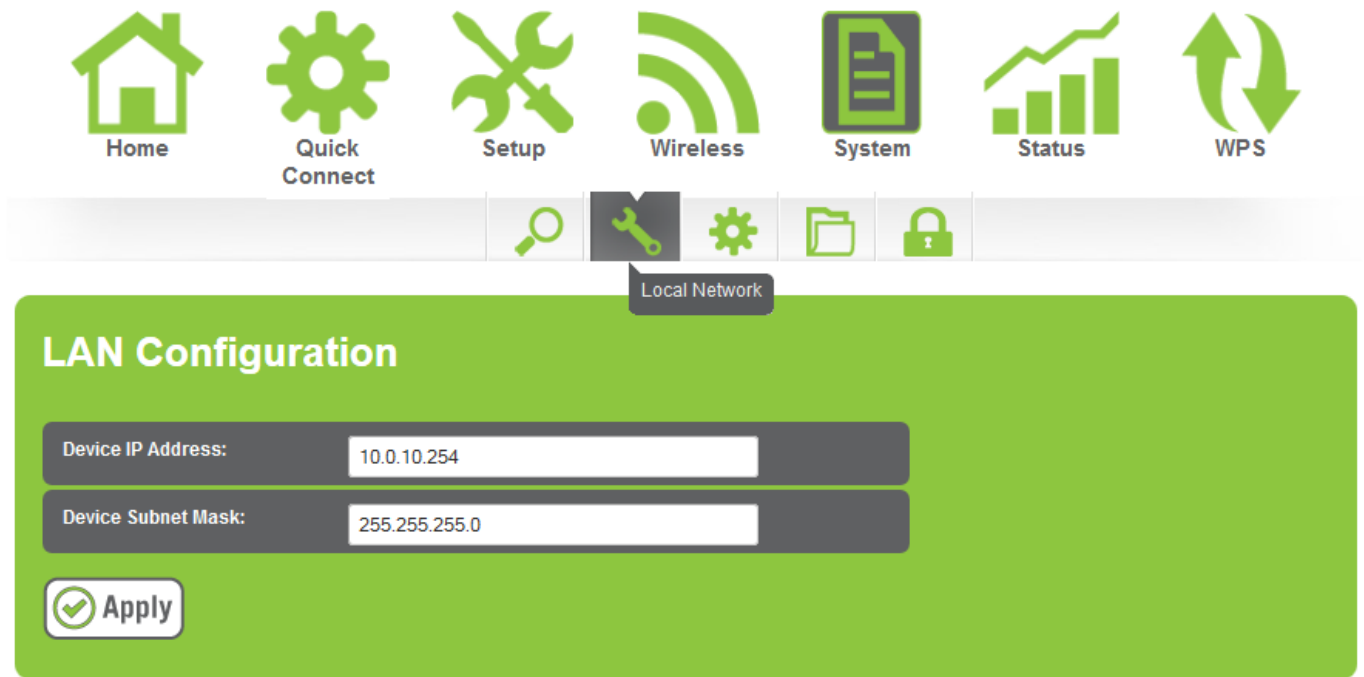


The interface shows a top navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. Below this is a secondary bar with icons for a magnifying glass, a wrench (selected), a gear, a folder, and a lock. A 'Local Network' tooltip is visible over the wrench icon. The main content area is titled 'LAN Configuration' and contains two input fields: 'Device IP Address' with the value '10.0.10.254' and 'Device Subnet Mask' with the value '255.255.255.0'. An 'Apply' button with a checkmark icon is at the bottom left of the configuration area.

### Device IP address

Shows the device's current IP address

**Note:** Change this IP address if you are using two WR100 on the same network to avoid IP address conflict within your network. You may configure the 2<sup>nd</sup> unit with IP address ex: 10.0.10.253

## Configuration Settings

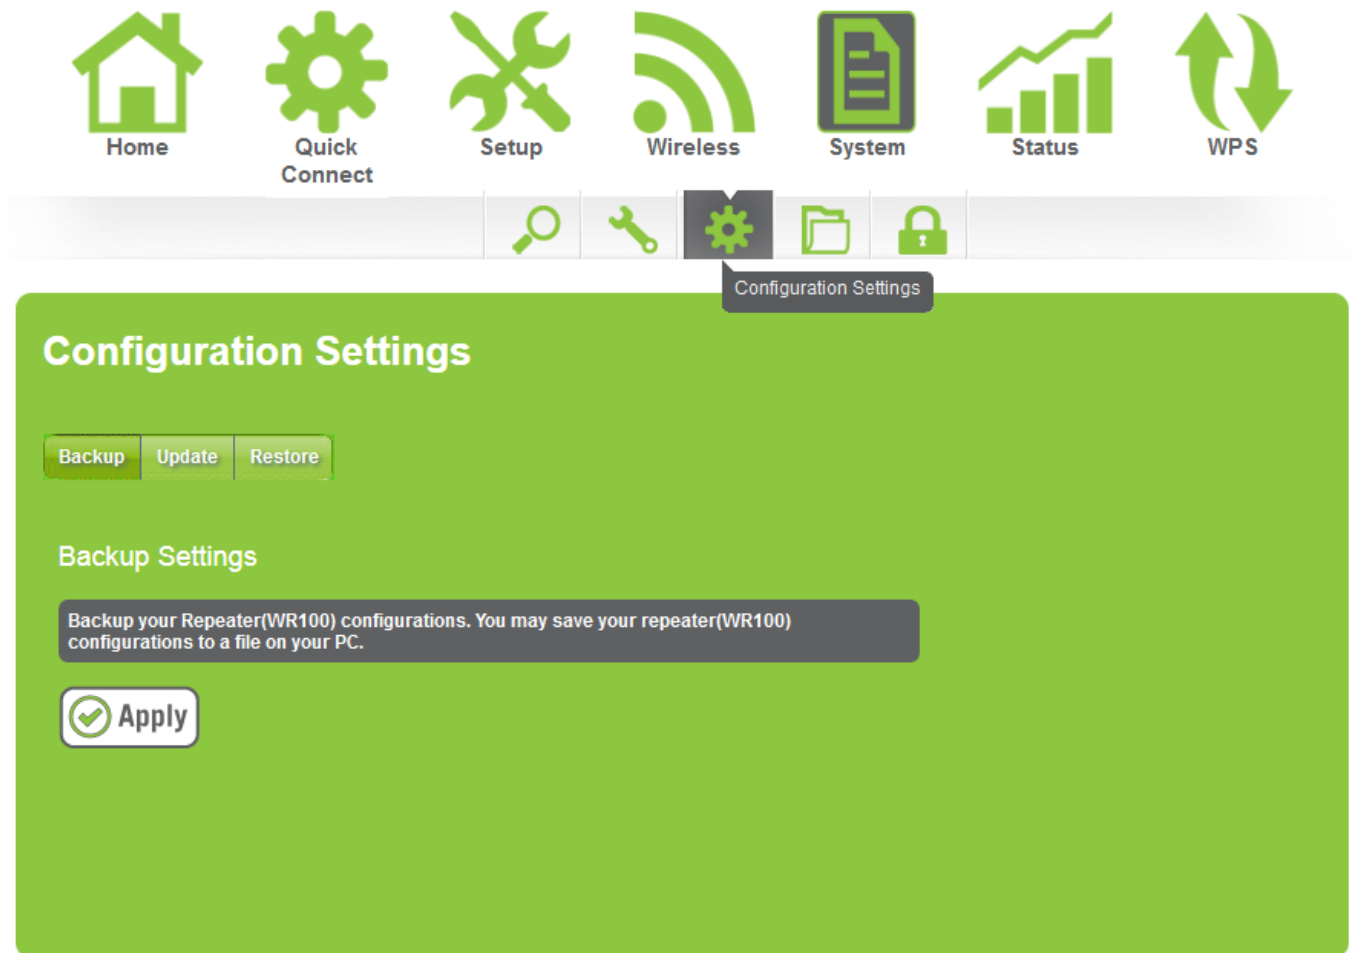

### Backup Settings

Allow you to save the current configuration of WR100. Default file name for the backup file will be "RT2880\_Settings.dat". Click **Apply** to start saving your configuration.

### Update

Here you can load the saved configuration of your WR100. Click browse and load the saved settings by clicking on the apply button.


### Restore

Click on the apply button to reset the unit back to its factory settings. Unsaved information will be lost.



## Firmware Upgrade

This option allows you to update the firmware of your device for future changes and enhancement. Download firmware only at [www.smartrg.com/support](http://www.smartrg.com/support) for future enhancement.

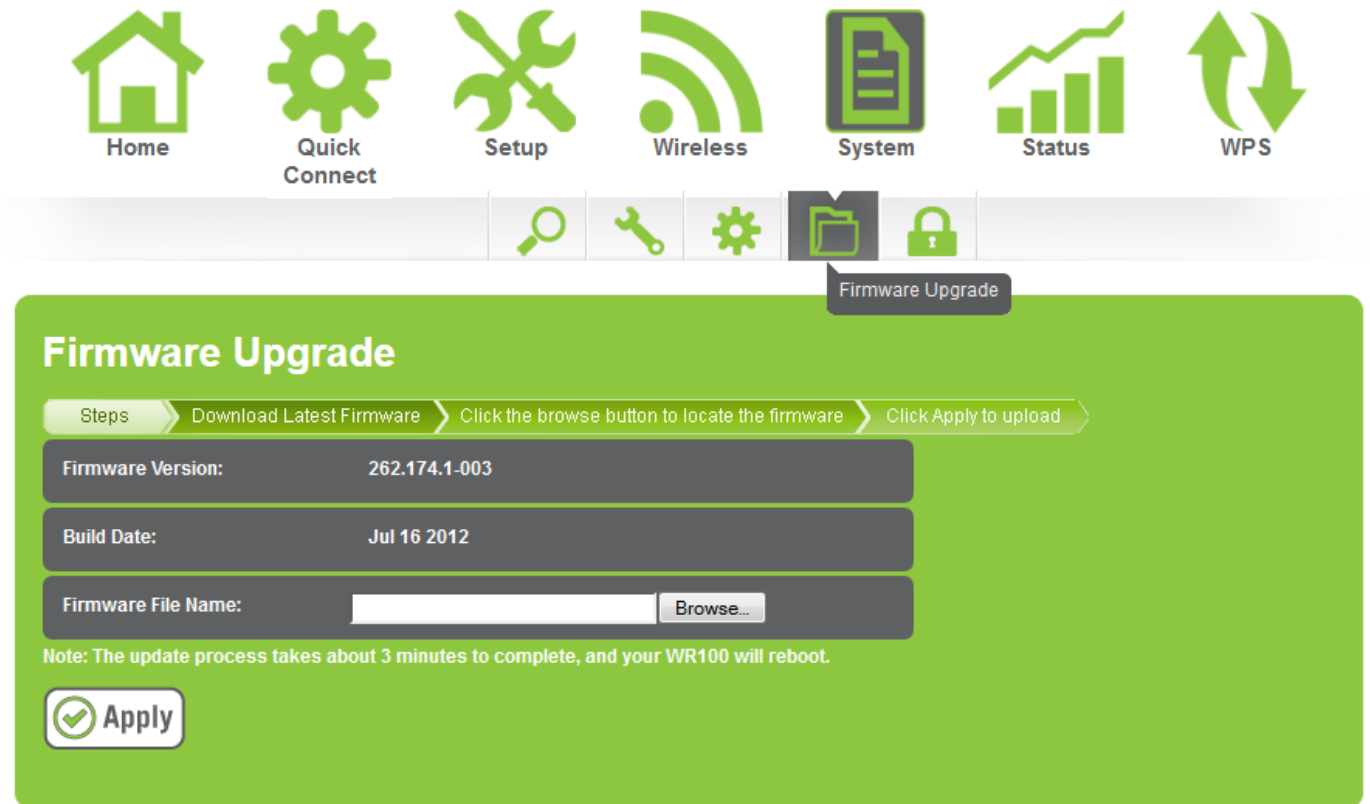

The screenshot shows the SmartRG WR100 web interface. At the top, there is a navigation bar with icons for Home, Quick Connect, Setup, Wireless, System, Status, and WPS. Below this is a secondary navigation bar with icons for Search, Tools, Settings, and a highlighted 'Firmware Upgrade' button. The main content area is titled 'Firmware Upgrade' and contains a progress bar with four steps: 'Steps', 'Download Latest Firmware', 'Click the browse button to locate the firmware', and 'Click Apply to upload'. Below the progress bar, there are three rows of information: 'Firmware Version: 262.174.1-003', 'Build Date: Jul 16 2012', and 'Firmware File Name: [input field] Browse...'. A note states: 'Note: The update process takes about 3 minutes to complete, and your WR100 will reboot.' At the bottom, there is a green 'Apply' button with a checkmark icon.


### Updating the firmware

- Connect an Ethernet cable between WR100 and computer
- Open web browser and type <http://10.0.10.254> to access the user interface
- Click on Setup and select firmware under the sub menu
- Click on the **Browse** button and locate and open the firmware for WR100 and click **Apply** to start the update.


**Note:** It is recommended to only use firmware which is officially released by SmartRG. Using third party firmware will void the warranty of the device.

## System Password

It is recommended to set a password on the web user interface, in order to prevent other users from gaining access to the web UI and making unwanted changes to your settings.



Home Quick Connect Setup Wireless System Status WPS




Search Settings System Password

### System Password

Username: admin

Password:

 Apply


### System Password

Type your desired password and click on the Apply button to activate this feature. To disable authentication, simply remove the password and click apply to save your settings.

**Note:** Forgotten passwords are not recoverable. Reset the device to factory defaults by pressing the reset button found beside the Ethernet port of the WR100, wait 60 seconds, and reconnect with your web browser.

## Installing the Device

Placement of the Wireless Repeater is crucial to obtain the best possible results for extending your existing wireless signal. It is ideal for the wireless repeater to be placed in a location where it can receive good wireless signal from the wireless router/AP so as to avoid disconnection and packet loss.

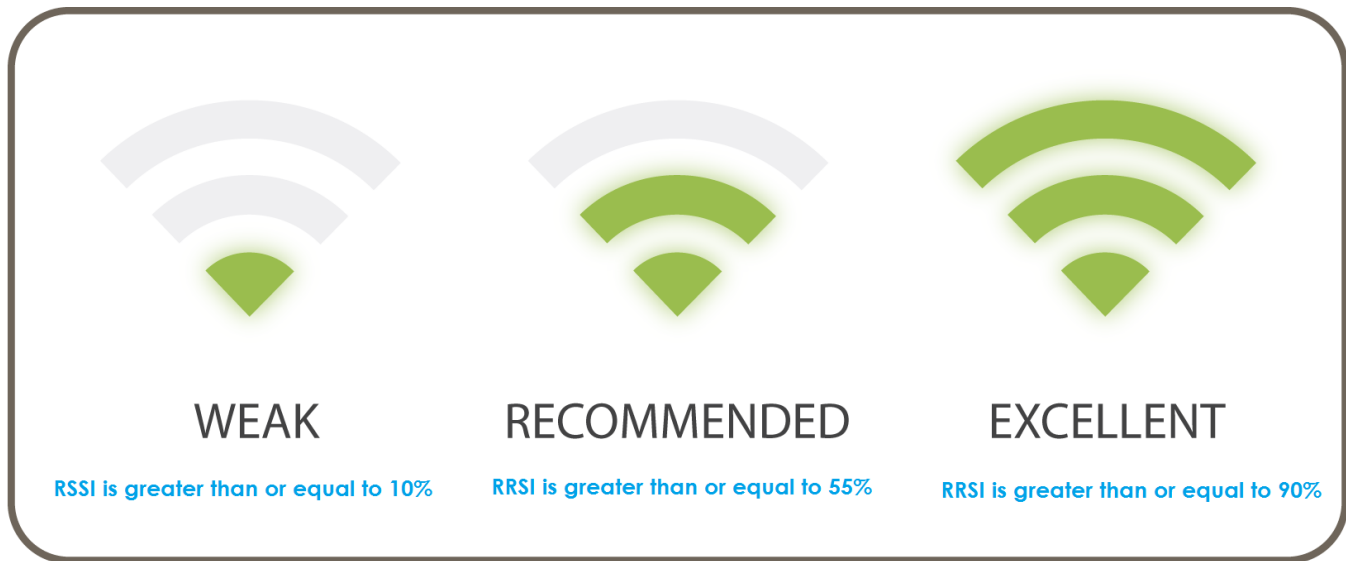



The LED smart indicator displays the received signal strength from your wireless router.


Wireless reception and throughput may vary according to the number of wireless clients that are in use at the same time, other nearby wireless devices, structure type, building materials and other interference present.

## Wireless Repeater

- Plug your WR100 to a power outlet, switch it ON and connect the Ethernet cable between your WR100 and Computer
- Launch web browser and you will be directed to the User Interface (In case it does not open type 10.0.10.254 and hit enter)

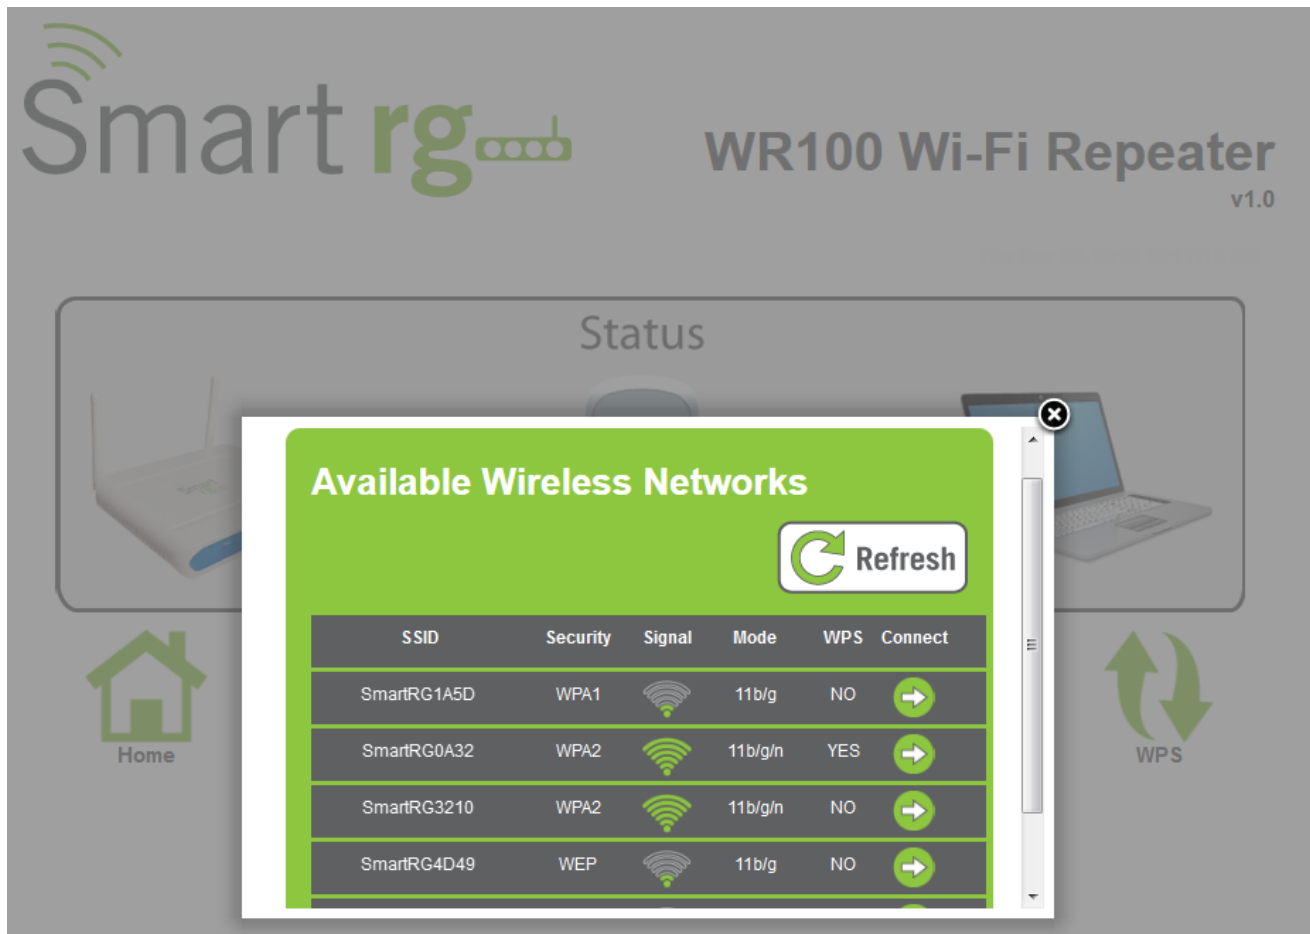


- Select your SSID (wireless network/wifi name) from the list and click connect 
- Type the password for the wireless network of your router and click apply. The WR100 will reboot and will redirect to the user interface with the following status.

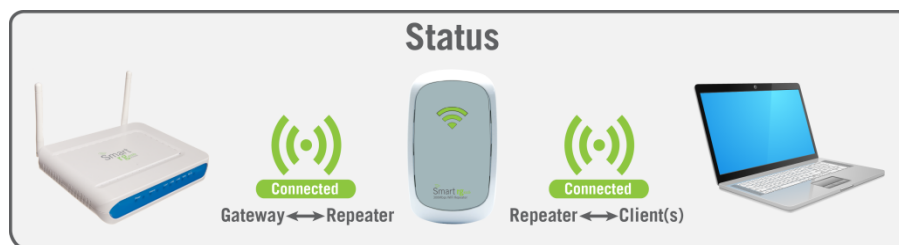

- Disconnect the Ethernet cable from WR100 and computer then place the device at the location, where it can get sufficient reception from your wireless router.

## SETUP DIAGRAM (REPEATER)

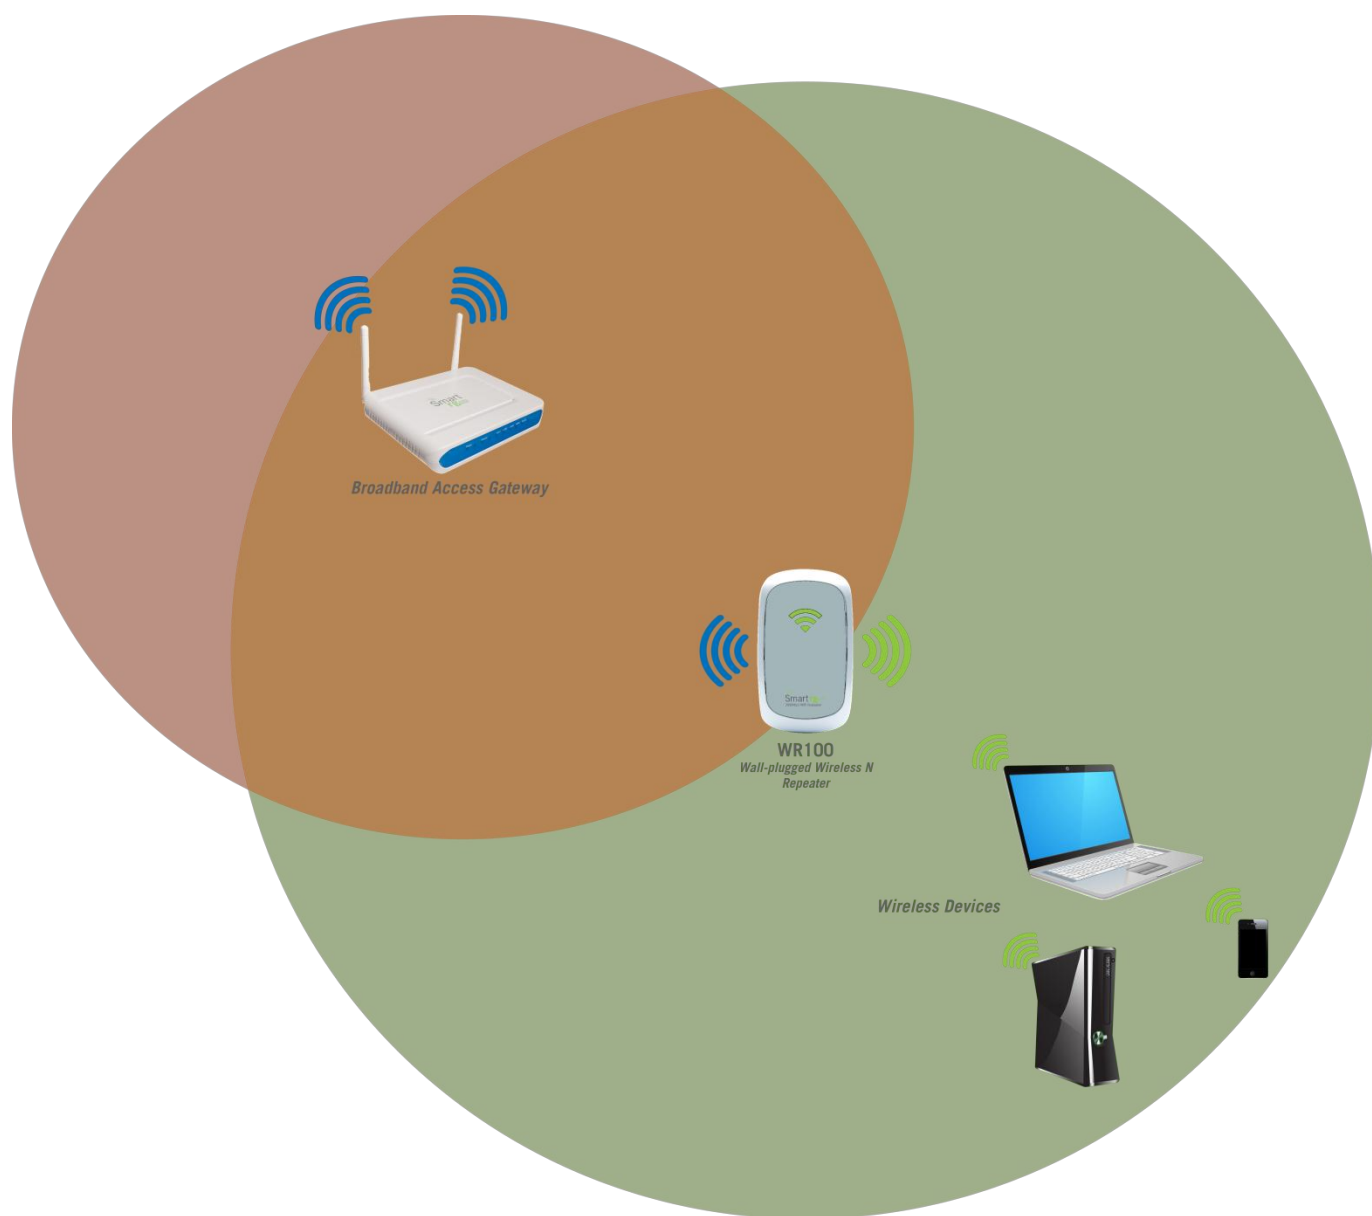

## Wireless Access Point

Setup your WR100 as an access point to provide wireless network to a router that doesn't have an integrated WiFi AP.

- Plug your WR100 to a power outlet
- Connect an Ethernet cable between the WR100 and Computer
- Launch web browser and you will be directed to the User Interface



### Setup for WR100

Mode of Operation:	<input type="button" value="Repeater"/> <input checked="" type="button" value="Access Point"/> <input type="button" value="Bridge"/>
SSID:	SmartRG_WR100
Broadcast SSID:	<input checked="" type="button" value="ENABLED"/> <input type="button" value="DISABLED"/>
Security Mode:	WPA2 PSK ▼
WPA Passphrase:	<input type="password" value="....."/> <input checked="" type="checkbox"/> Mask
WPA Encryption:	<input type="button" value="TKIP"/> <input type="button" value="AES"/> <input checked="" type="button" value="TKIP+AES"/>
Channel:	2462MHz (Channel 11) ▼



- Go to Setup, set Mode of Operation to Access Point
- Type the name of your wireless network under SSID
- Type the password of the wireless network and click apply
- Connect the WR100 to router's LAN port after the settings have been saved.

## SETUP DIAGRAM (Wireless Access Point)



## Wireless Bridge

Connect wired devices to your wireless network by connecting an Ethernet cable from a wired device, such as a Desktop PC, Game Console or Internet-ready LCD TV, to the Ethernet port of the WR100.

- Plug in and turn ON your WR100
- Connect the Ethernet cable between your computer and WR100
- Launch a web browser. You will be directed to the user interface



### Setup for WR100


Mode of Operation:	<span>Repeater</span> <span>Access Point</span> <span>Bridge</span>
SSID:	<input type="text"/>
MAC Address:	<input type="text"/>
Security Mode:	WPA2 PSK <input type="button" value="v"/>
WPA Passphrase:	<input type="password" value="....."/> <input checked="" type="checkbox"/> Mask
WPA Encryption:	<span>TKIP</span> <span>AES</span>
Channel:	2462MHz (Channel 11) <input type="button" value="v"/>
Enhanced Compatibility:	<span>On</span> <span>Off</span>
<input checked="" type="checkbox"/> Apply	

- Click on **Setup** and set Mode of Operation to **Bridge**
- Type the name of your wireless network for the **SSID**
- Enter the channel and password of your wireless network and click apply

**Note:** SSID, Security mode, password/passphrase and wireless channel must match to router's wireless settings.



## SETUP DIAGRAM (Wireless Bridge)

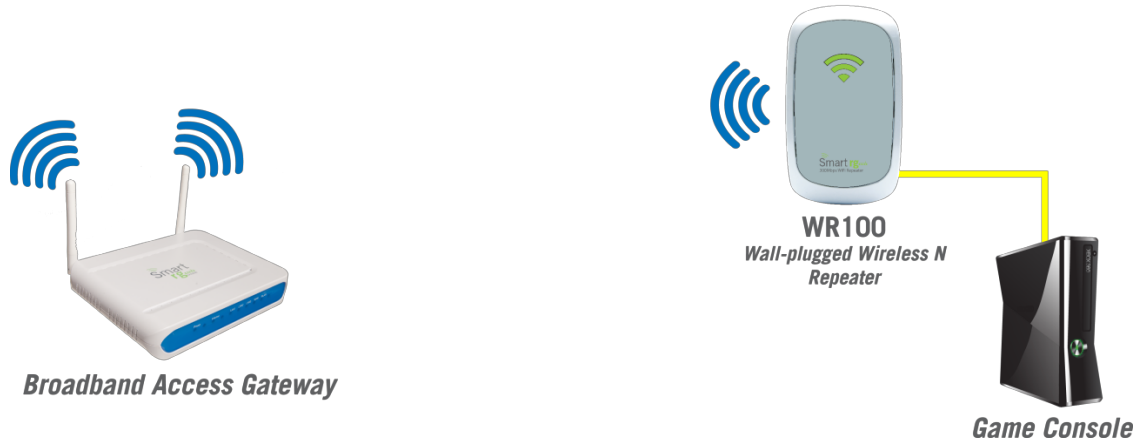

## WPS

WPS (WiFi Protected Setup) makes it easier for you to connect your WR100 to your wireless router and WR100 to your wireless devices with a push of a button. (WPS feature must be enabled and must be supported on the wireless router and wireless devices that will be connected to WR100).

### Configure WR100 to Wireless Router via WPS

- Press the WPS button of WR100 for 5 seconds
- Press the WPS button on your router for 2 seconds within 2 minutes time

### Configure WR100 to Wireless client via WPS

- Press the WPS button of WR100 for 2 seconds
- Press the WPS button on the wireless client for 2 seconds within 2 minutes.

## Safety Precautions

- Pluggable equipment must be installed near to an easily accessible socket outlet.
- Do not open, service, or change any component.
- Only qualified technical specialists are allowed to service the equipment.
- Observe safety precautions to avoid electric shock.
- Check voltage before connecting to the power supply. Connecting to the wrong voltage will damage the equipment.